


CHILD ANCHOR RESTRAINT FITTING INSTRUCTIONS

FOR USE WITH ALL KLIPPAN CHILD RESTRAINTS COMPLYING WITH AS1754 & OTHER CHILD RESTRAINTS MANUFACTURED FROM 1993.


FOR VEHICLES FITTED WITH ANCHORAGE POINTS

Locate the anchorage point behind the rear seating position (consult the vehicles owner handbook for the location of the anchorage point). Remove the thread plug for the parcel shelf / floor / roof and install the anchor bolt as shown. **Caution:** Do not over tighten the anchor bolt maximum torque 20Nm.

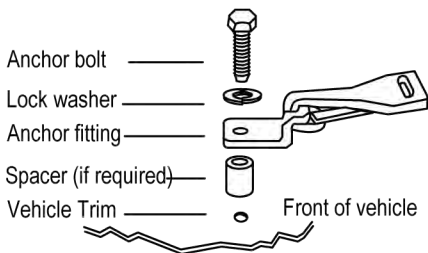

FOR VEHICLES NOT FITTED WITH ANCHORAGE POINTS

If your vehicle has no anchorage point provided, you will need to: Drill a 9mm diameter hole in the parcel shelf on the centreline of the seating position as illustrated. Install the anchor bolt as shown.

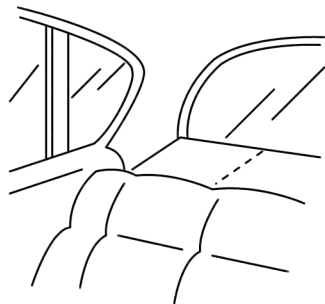

Please consult your nearest child restraint fitting station or traffic authority for vehicle inspection for advice on the best position to place the anchorage point and for the correct bolt length and use of spacers. **Warning:** Child restraints must not be attached to unsound metal or to wood, or to synthetic structures. When drilling the 9mm hole do not drill through fuel lines, fuel tanks, electrical wiring or radio speakers. Webbing straps must be protected from sharp corners and edges. **Note:** The anchor fitting must be used only as described. It must not be hooked onto another position.

